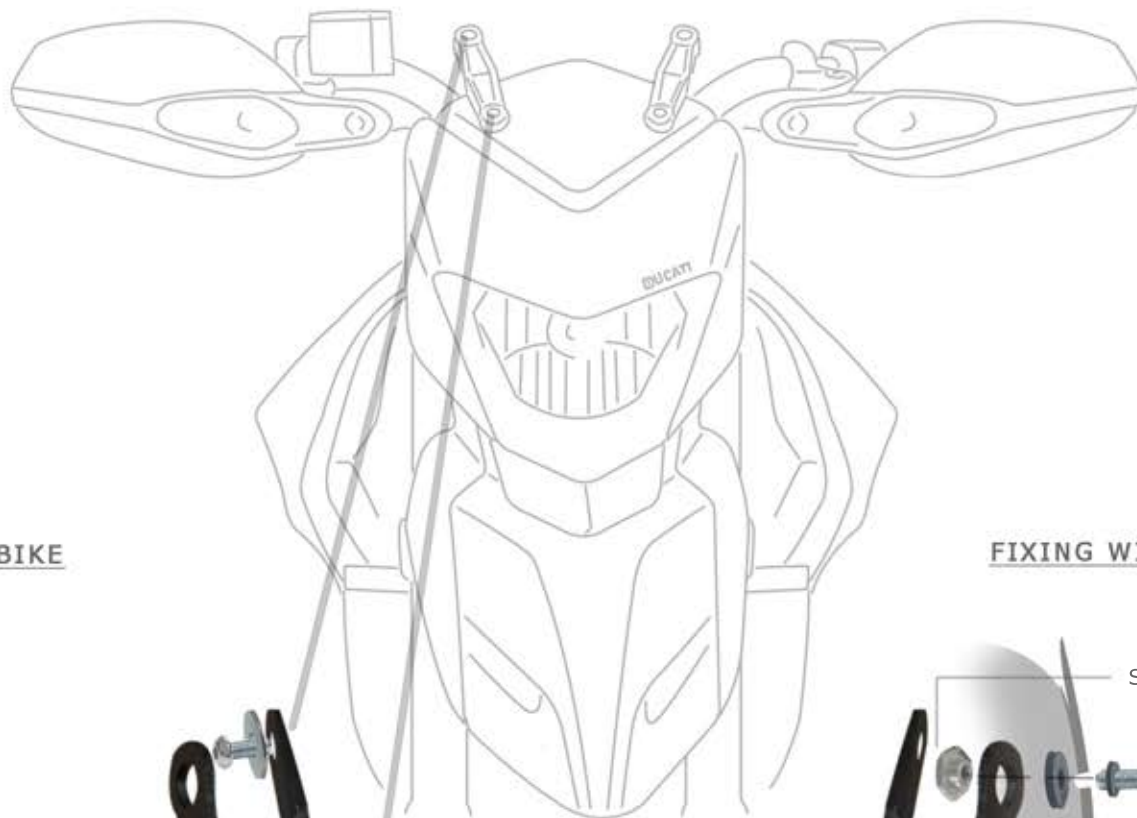


**MOUNTING PROCEDURE****KIT WINDSHIELD  
DUCATI HYPERSTRADA****DH8300**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**MOUNTING PROCEDURE:**

REMOVE THE ORIGINAL WINDSHIELD/SCREEN AND INSTALL THE SPECIFIC BRACKETS WITH THE SCREWS 5X16.

TAKE A LOOK TO THE PICTURE AND POSITION ALL LIKE SHOWN.

FIND THE RIGHT POSITION OF WINDSHIELD/SCREEN ON THE BRACKETS (PREVIOUSLY MOUNTED) AND LOCK THE SCREWS.

**FIXING BIKE**

Screw 5x16

Large washer Ø 5

**FIXING WINDSHIELD**

Special bush

Specific bracket

Plexiglass

Rubber washer

Teflon washer

Screw 5x12


NOTE: NOT LOCK TOO MUCH TO AVOID DAMAGES OF PLEXIGLASS.

**ISTRUZIONI DI MONTAGGIO****KIT CUPOLINO  
DUCATI HYPERSTRADA****DH8300**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**PROCEDURA MONTAGGIO:**

RIMUOVERE IL CUPOLINO ORIGINALE ED INSTALLARE CON LE BRUGOLE 5X16 LE STAFFE SPECIFICHE. POSIZIONARE IL TUTTO COME DA SCHEMA ILLUSTRATO. TROVARE LA GIUSTA POSIZIONE DEL CUPOLINO SULLE STAFFE PRECEDENTEMENTE MONTATE E PROCEDERE AL SERRAGGIO DI TUTTA LA VITERIA.

**KIT**

- X1. PLEXIGLASS
- X2. STAFFE SPECIFICHE
- X4. BOCCOLE SPECIALI
- X4. BRUGOLE "TESTA BOMBATA" 5X12
- X4. BRUGOLE "TESTA BOMBATA" 5X20
- X4. RONDELLE TEFLON Ø 5
- X4. RONDELLE Ø 5 LARGHE
- X4. RONDELLE DI GOMMA

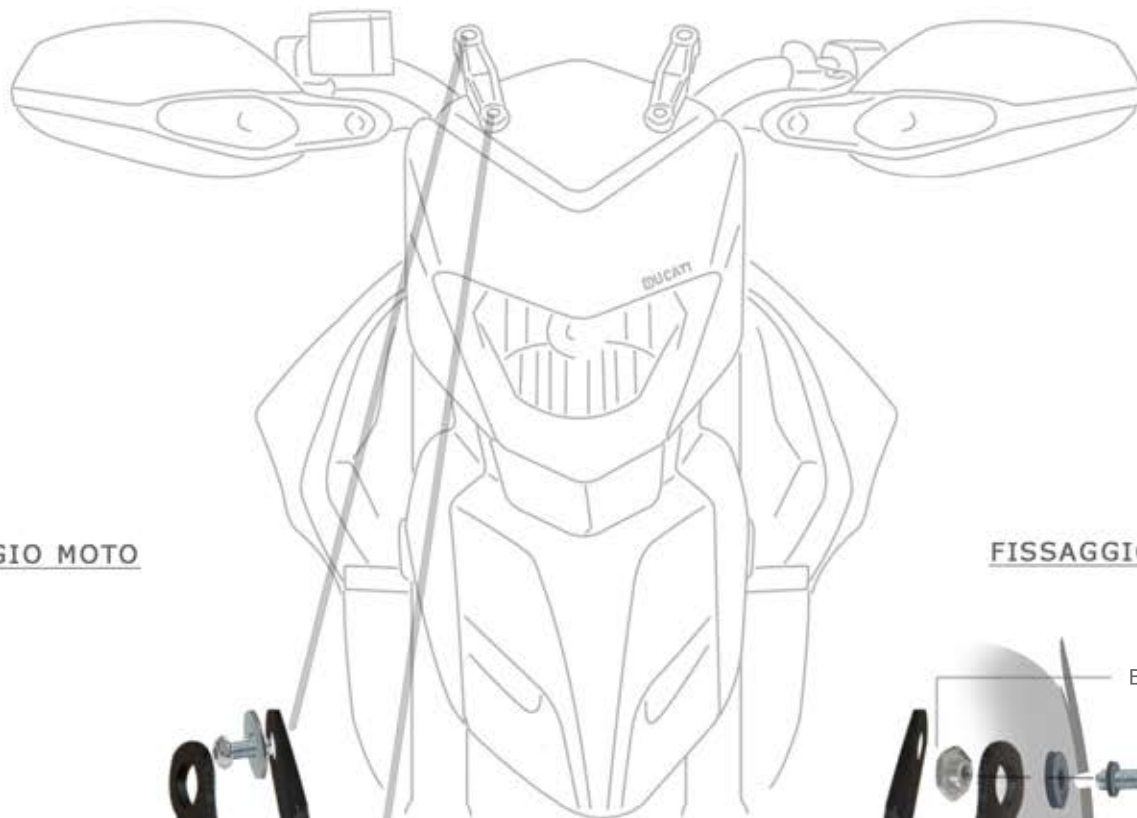**FISSAGGIO MOTO**

Brugola 5x16

Rondella Ø 5 Larga

**FISSAGGIO CUPOLINO**

Boccola Speciale

Staffa Specifica

Plexiglass

Rond. Gomma

Rond. Teflon

Brugola 5x12

**NOTE: NON SERRARE IN MODO ECCESSIVO ONDE EVITARE ROTTURE DEL PLEXIGLASS.**