

ASSEMBLING INSTRUCTION


WINDSHIELD

SG7300

WWW.BARRACUDAMOTO.COM

LEGEND

- | | | |
|--|--|---|
| <p>1. RUBBER PROTECTION
PROTEZIONE IN GOMMA
PROTECCIÓN DE GOMA
GUMMISCHUTZ
PROTECTION EN CAOUTCHOUC</p> <p>2. SCREW M8X50
VITE M8X50
TORNILLO M8X50
SCHRAUBE M8X50
VIS M8X50</p> <p>3. SPECIFIC THICKNESS H10MM
SPESSORE SPECIFICO H10MM
ESPACIADOR H10MM
ABSTANDSHALTER H10MM
ESPACEUR H10MM</p> | <p>4. SCREW M5X12
VITE M5X12
TORNILLO M5X12
SCHRAUBE M5X12
VIS M5X12</p> <p>5. TEFLON WASHER
RONDELLA DI TEFLON
ARANDELA DE TEFLON
TEFLON SCHEIBE
RONDELLE EN TEFLON</p> <p>6. RUBBER WASHER
RONDELLA DI GOMMA
ARANDELA DE GOMA
GUMMISCHEIBE
RONDELLE EN CAOUTCHOUC</p> | <p>7. THREADED SPACER
BOCCOLA FILETTATA
ESPACIADOR ROSCADO
GEWINDE ABSTAND
DISTANCE DE FILETS</p> <p>8. NEOPRENE
NEOPRENE
NEOPRENO
NEOPREN
NÉOPRÈNE</p> |
|--|--|---|

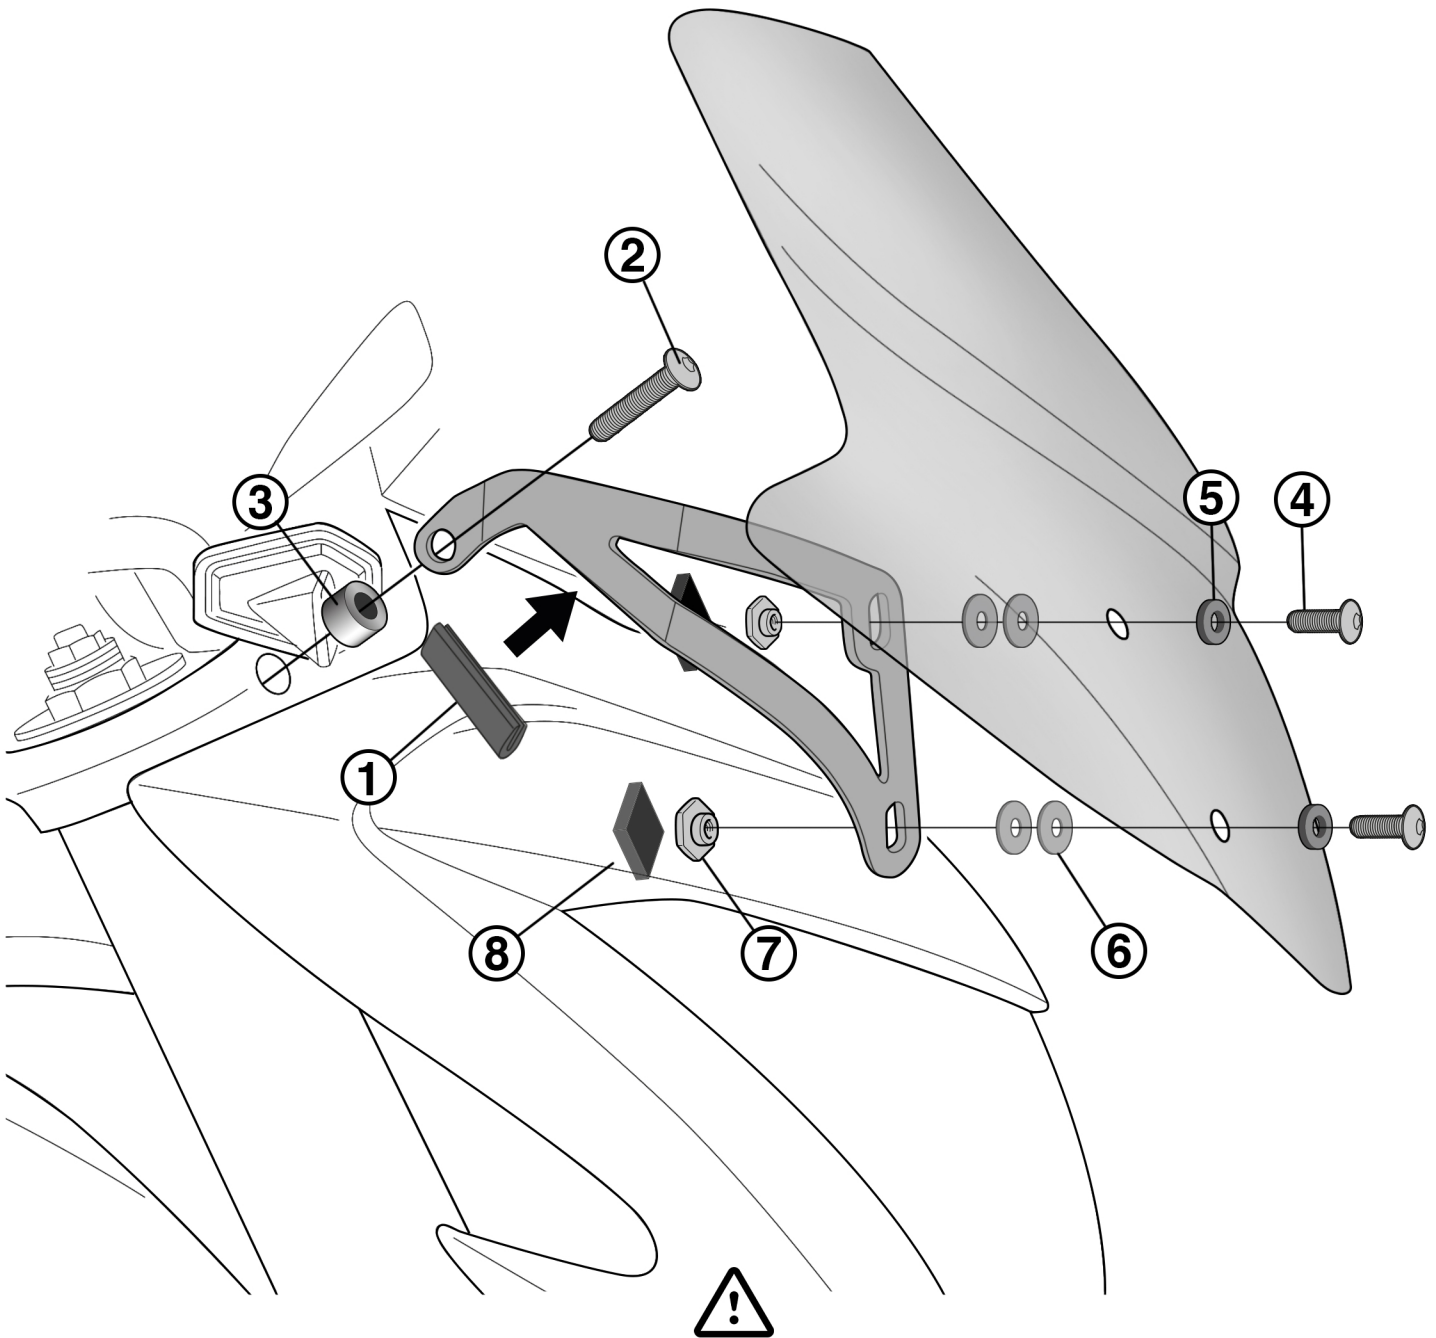

EN: DO NOT THIGTEN IN EXCESSIVE WAY TO AVOID BREAKAGE OF THE WINDSHIELD
IT: NON STRINGERE ECCESSIVAMENTE PER EVITARE ROTTURE DEL CUPOLINO
SP: NO APRETAR DE FORMA EXCESIVA PARA EVITAR LA ROTURA DEL PARABRISAS
DE: NICHT ZU FEST ANZIEHEN, UM EINEN BRUCH DES SCHEINWERFER VERKLEIDUNG ZU VERMEIDEN
FR: NE PAS TROP SERRER POUR ÉVITER DE CASSER LE PARE-BRISE