

MOUNTING PROCEDURE**KIT WINDSHIELD
YAMAHA MT-09****YMT9300****KIT**

X1 PLEXIGLASS
X2 SPECIFIC BRACKET
X4 THICKNESS
X4 SCREW 5X12 "ROUND HEAD"
X4 SCREW 6X20 "ROUND HEAD"
X4 TEFLON WASHER DIAMETER 5
X8 RUBBER WASHER


WWW.BARRACUDAMOTO.COM

MOUNTING PROCEDURE:

REMOVE THE ORIGINAL WINDSHIELD/SCREEN AND INSTALL WITH THE 6X20 SCREW WITH THE SPECIFIC BRACKETS.


POSITION ALL LIKE THE SHOWN SCHEME.

FIND THE RIGHT POSITION OF WINDSHIELD/SCREEN ON THE BRACKETS (PREVIOUSLY MOUNTED) AND PROCEED TO THE LOCK OF ALL THE SCREWS.

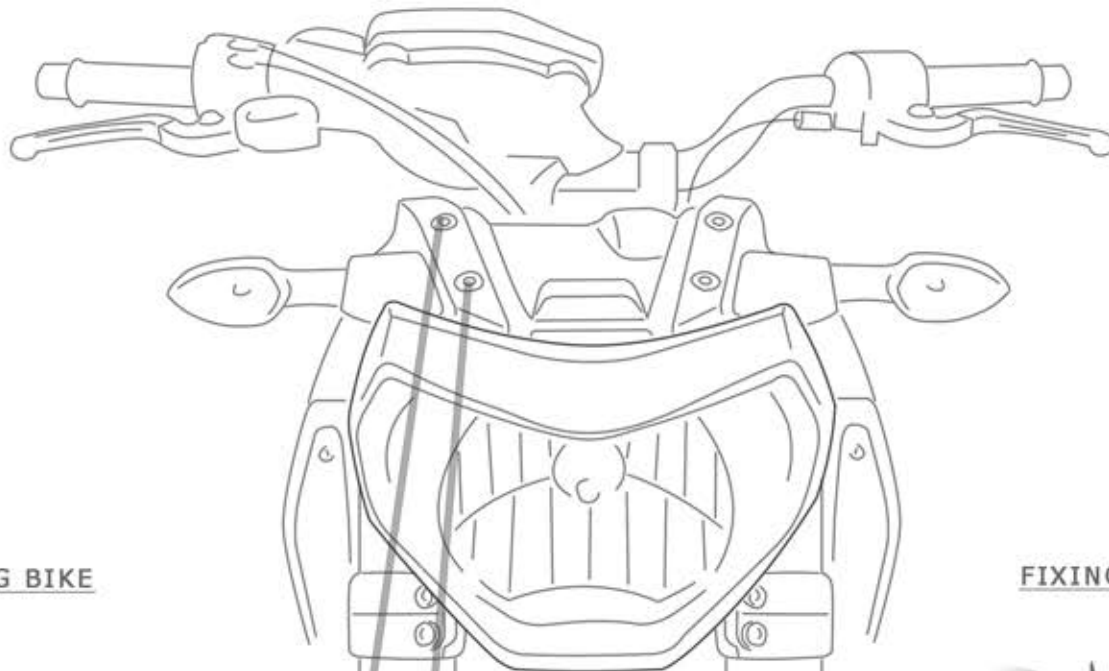

FIXING BIKE

FIXING WINDSHIELD

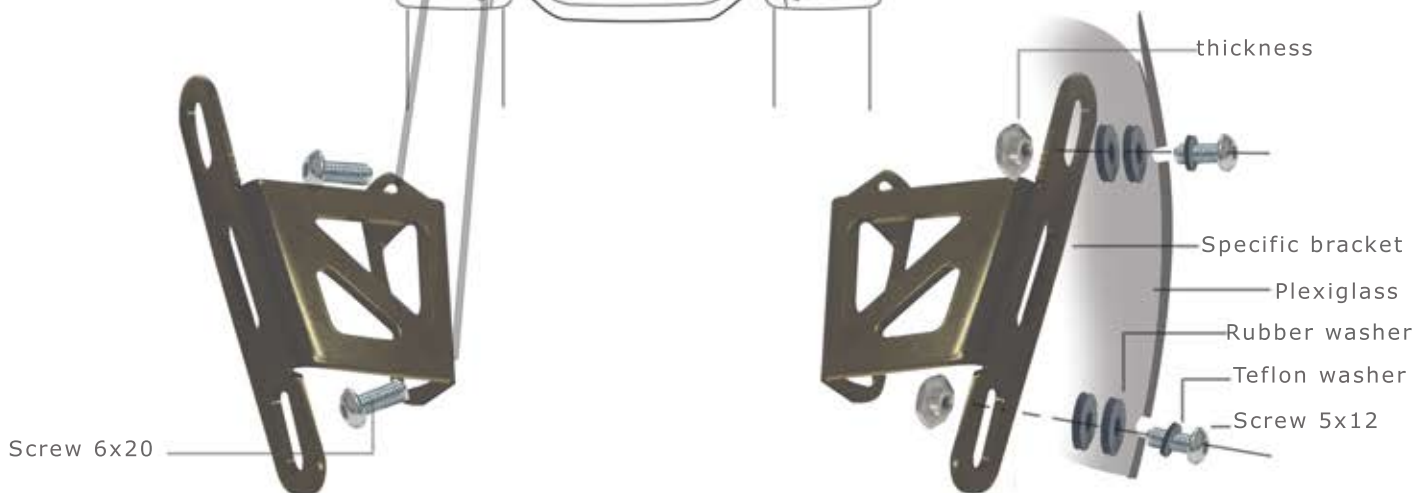

NOTE: NOT LOCK TOO MUCH TO AVOID DAMAGES OF PLEXIGLASS.